

Hydraulic Performance Information System


Installation of the HPIS

The following actions need to be executed:

Copy the Database file (Hydraulic Performance DB V.1) which is available under the directory: “Database” on the accompanying CD to a selected folder of the hard drive. The Database file is a MS Access version 2007 file.


Viewing the database

Step 1: Double click on the file Hydraulic Performance DB V.1, which was stored to the hard drive, to open the file. The following screens will popup.

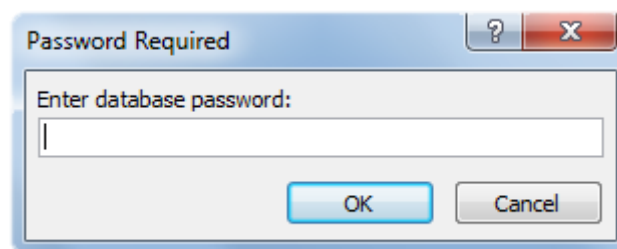

Step 2: Provide the security access by using the following password: “hydraulic”.

Step 3: Select the user name from the drop box.

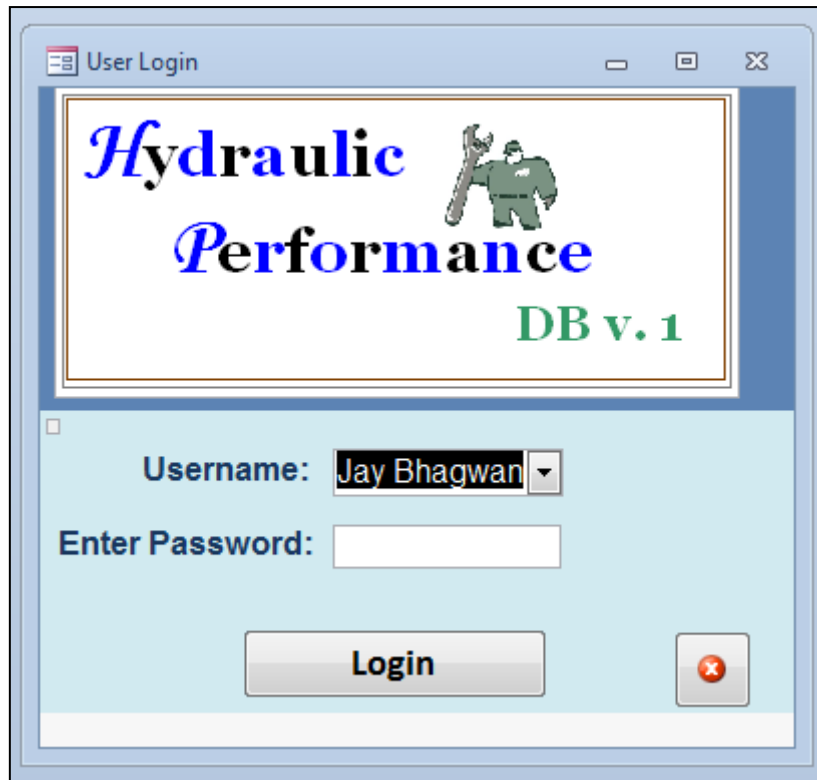

Step 4: Enter the password: "wrc1".

Step 5: Full access will be available to all material.